

OWNER'S TECHNICAL MANUAL

SO600

Oxy Acetylene Hose Reel

Description

The SO600 oxy acetylene hose reel from Alemlube is a genuine industrial quality welding reel for all general welding applications undertaken by contractors, fabricators and people involved in the construction and industrial fields. Featuring impact resistant UV stabilised covers for maximum durability and an automatic and positive latching mechanism, the SO600 can easily be mounted on the wall or ceiling and can be carried in utes and service vehicles.

Specifications

Use	Oxy acetylene welding
Pressure	300psi
Hose Length	15m of 6mm ID rubber hose
Materials	Plastic UV stabilised cover & steel spring
Dimensions	630mm (L) x 442mm (H) x 261mm (W)
Working Temp	-30°C – 60°C

Installation


- Prior to mounting the hose reel, ensure that the supply line pressure dose not exceed the maximum working pressure of the hose reel.
- 2. Unpack and inspect reel for damage. Turn by hand to check for smooth operation. Check for completeness.
- 3. For overhead ceiling mounting: Install reel at most 10 ft/ 3m above the floor.
- 4. You will need to purchase appropriate hardware for mounting your new reel.
 - 1) The reel base has four 6.5mm drilled holes for mounting on a suitable flat surface.
 - 2) Using the four holes in the base, mount the reel in the desired location.

Be sure to use appropriate hardware and tighten securely.

Operation

- Check reel for correct operation by slowly pulling out hose. A "clicking" noise will be heard every half revolution of the drum.
- 2. To latch the reel, pull out the hose and allow it to retract after hearing the first second or third "click".
- To unlatch, slowly pull out the hose until the "clicking" noise stops, then let hose retract until the hose stopper rests against the hose guide.
- 4. If necessary, adjust spring tension on reel by adding or removing wraps of hose from spool, one wraps at a time, until desired tension is obtained. Add wraps to increase tension. Remove wraps to decrease tension.



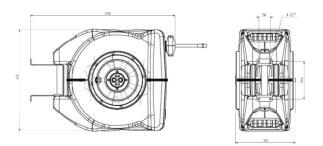

Maintenance

- 1. Make sure the hose is in proper working order.
- 2. Clean the hose with a cloth dipped in warm water to remove dirt or deposits and ensure correct rewinding.
- 3. Do not use detergents or solvents which could prove incompatible with cable-winder materials.
- 4. Dismantling of the unit by unskilled personal could prove hazardous; the risk involved mainly concern the preloaded springs.

